


BARCODE LED Watch

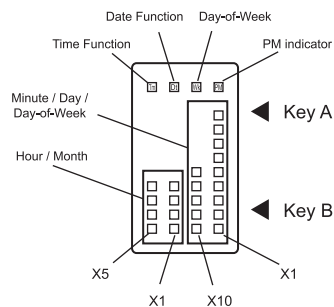

Key A - 2 o'clock position
Key B - 4 o'clock position (Set function)

Press Key A will see the time for a few seconds. If user press A again will go to Date mode, if press A again, will go to Day-of-week mode.

Each minute has random flashing

The random flashing will not activate on 1:00am to 6:00pm. During this period, if user pressed key A once, it will have this flashing on each minute flashing for 12 consequence minutes. Then, the random flashing will stop again to save power.

Time mode :

- Top left icon light up
- Left 2 column represent hour (left column each LED = 5 hour; 2nd column from left each LED = 1 hour)
- Right 2 column represent minute (3rd column from left each LED = 10 minutes; 4th column from left each LED = 1 minute)
- No LED light up when on sharp 1:00 am, 2:00am etc.
- (If 12 hour system is selected, PM icon will light up if at the afternoon)

Date mode :

- Date icon light up
- Left 2 columns = month; right 2 columns = day i.e. 01=1st, 02 = 2nd ... 30=30th, 31=31st.

Day-of-week Mode :

- Day-of-week icon light up
- Right column digit light up.
- 1=Sun, 2=Mon ... 6=Fri, 7=Sat

How to set the time :

- Press Key B, the Hour digits will blink (minute digits not blinking); press A to increase the digits
- Press Key B to confirm and move to minute digits; press A to increase the digits
- Press Key B to confirm and move to 12/24 hour system selection; 12 or 24 showing on the middle 2 columns.
- Press Key B to confirm

How to set the Date :

- In Date mode (the LED is still on); press Key B to go into setting mode
- The month digit will blink (day digits not blinking); press A to increase the digits
- Press Key B to confirm and move to day digits; press A to increase the digits
- Press Key B to confirm

How to set the Day-of-week :

- In Day-of-week mode (the LED is still on); press Key B to go into setting mode
- The right column digits will blink (default is Sun i.e. 1 LED) press A to increase the digits
- Press Key B to confirm

Battery replacement

- Two Lithium batteries CR2032 provides the power to operate the lights
- If you notice your watch's light is getting dimmer, this is an indication that your battery needs to be replaced
- Do not wait until your watch stops functioning
- Weak or dead battery left in your product for an extended time may damage the movement
- To avoid the possibility of damaging your product, we recommend that you send it to watch specialist to have the battery replaced and the case back properly sealed

Cautions

- Don't press buttons under water nor with excessive moisture on the product surface.
- Avoid long-term exposure to extreme temperature, direct sunlight. This can cause material coloring to fade or discoloration.
- Please avoid rough use or dropping this product. Do not use strong detergent, sprays or chemicals as this will dis-color the case or strap.
- To clean your watch use only soft cloth, moistened lightly.

BARCODE
|||

Instruction Manual