


Morse Code LED Watch

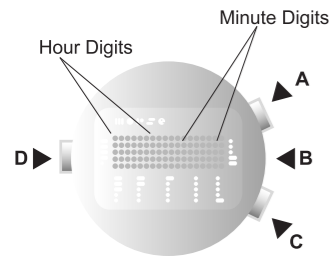

Key A - 2 o'clock position (Time Display without sound)
 Key B - 3 o'clock position (Set function)
 Key C - 4 o'clock position (Code without Display)
 Key D - 9 o'clock position (Morse/Normal Time)


How to read Morse code :

- Press Key A will see the time for a few seconds
- Each digit composed by 2 column of LEDs.
- Reading from top to bottom.
- 1 dot = short (dot)
- 2 dots = long (dash)
- Pause between Each digit/alphabet

Example : 12:38 am
 that is Morse ▶
 that is Decimal ▶ 1 2 : 3 8

Example : 4:56 pm
 that is Morse ▶
 that is Decimal ▶ 4 5 6

Summary of Morse code conversion :

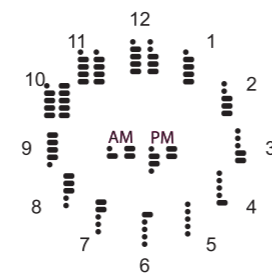

How to set the time :

- Hold Key B, the Hour LEDs will blink (minute LEDs not blinking); press A to increase the Hours
- Press Key B to confirm and move to minute LEDs; press A to increase the LEDs.
- Press Key B to confirm and move to 12/24 hour system selection
- Press Key A to change to the system you need
- Press Key B to confirm.

Battery replacement

- One Lithium battery CR2032 provides the power to operate the lights
- If you notice your watch's light is getting dimmer, this is an indication that your battery needs to be replaced
- Do not wait until your watch stops functioning
- Weak or dead battery left in your product for an extended time may damage the movement
- To avoid the possibility of damaging your product, we recommend that you send it to watch specialist to have the battery replaced and the case back properly sealed

Cautions

- Don't press buttons under water nor with excessive moisture on the product surface.
- Avoid long-term exposure to extreme temperature, direct sunlight. This can cause material coloring to fade or discoloration.
- Please avoid rough use or dropping this product. Do not use strong detergent, sprays or chemicals as this will dis-color the case or strap.
- To clean your watch use only soft cloth, moistened lightly.


Warranty

- The watch has a full one year warranty against manufacturer defects from date of purchase.
- Water damage, broken glass or damage due to shock is not covered.
- Any warranty claims must be claimed through place of purchase.



Instruction Manual

Morse Code LED Watch

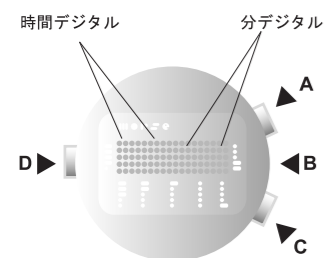

キーA 2時の位置 (時間表示音なし)
 キーB 3時の位置 (セット)
 キーC 4時の位置 (コード表示なし)
 キーD 9時の位置 (モーリス・通常時間)


モーリスコードの見方

- キーAを押し時間を表示。
- それぞれのデジタルは2コラムのLEDによって構成される。
- 上から下に時間を読む。
- 1ドット=ショート 2ドット=ロング (ダッシュ)
- それぞれのデジタル・アルファベット間は休止

Example : 12:38 am
 モーリス ▶
 デジタル ▶ 1 2 : 3 8

Example : 4:56 pm
 モーリス ▶
 デジタル ▶ 4 5 6

モーリスコードの変換表

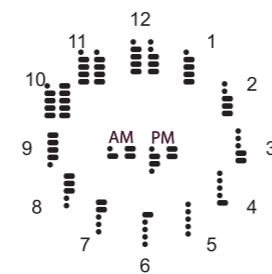

時間設定の仕方

- キーBを押し時間LEDを点滅させます。
- キーAを押し時間を進めます。
- キーBを押し時間を決定しLED設定に移ります。
- キーAを押し分を進めます。
- キーBを押し分を決定し12/24時間設定に移ります。
- キーAを押し12、24時間を選択し
- キーBを押し決定します。

電池の交換

- CR2032を使用しています。
- もし少しでも時計の表示が暗くなった場合
- すぐに使用を中止し、電池の交換を行ってください。
- 弱った電池を使い続けると、中の電子部分が損傷する可能性があります。
- 電池の交換は専門の時計店等で行うことをお勧めいたします。

注意

- 水中や水滴が表面についた状態でボタンを押さないでください。
- 高温、直射日光を避けてください。材質が変化する可能性があります。
- 薬品を使って表面を拭いたりしないでください。また、商品を落下したり、乱暴に扱わないでください。
- 時計が汚れた場合少しだけ濡らした柔らかい布でやさしく汚れをふき取ってください。

保証

- この時計は製造不良に関して購入日より1年間の保証致します。
- 水による不良、ガラス割れや打撃による損傷は保証対象外です。
- 保証による修理は購入店経由でご依頼ください。



Instruction Manual